Opening the Key Safe

- Pull down the Weather Resistant Cover to expose the Dials (fig. 1).
- 2 Rotate Dials, aligning numbers with Passcode Line (default 0-0-0-0) (fig. 2).
- 3 Flip Switch 1 downward (fig. 2).



Setting a Passcode

- Open key safe with Dials set to current passcode (default 0-0-0-0)
- 2 Slide Code Lever to SET position (Fig. 3).
- 3 Turn Dials to new combination (ensure code is aligned with Passcode Line).
- 4 Slide Code Lever to original position (Fig. 3). The new code is now set





KS0004 **LED Combination Key Safe**



 
Installation Guide

Installation Instructions

- 1 Open key safe and locate the 4 installation holes. Each hole is 6mm in diameter.
- 2 Hold key safe to the wall, and mark position of all 4 holes with a pencil (1).
- Using a masonry drill bit, drill all 4 holes into the wall (2).
- 4 Insert expansion plugs into the 4 holes (3).
- 5 Place key safe against the wall and screw into place with 4 screws (4).









LED Light

The LED Light will turn on automatically when the cover is opened, and turn off after 15 seconds.

The LED Light can be turned back on for another 15 seconds by pressing the LED Light Switch.



LED Light Switch

Detachable Hook

Removing the Hook: Insert a small flat head screwdriver into the installation hole on one side, and gently lift the hook out.

Installing the Hook: Tilt hook, place one end into the Hook Installation Hole, then gently push the other end with your thumb. You will hear a click when the hook is successfully installed.



Detachable Hook

Important Note

Always close the weather-resistant cover after use.

