

NOT JUST ABOUT  
PADLOCKS



NOT JUST ABOUT  
PADLOCKS



KS0003

**XL Combination Key Safe**




**Installation Guide**

## Installation Instructions

- 1 Open key safe and locate the 4 installation holes. Each hole is 6mm in diameter.
- 2 Hold key safe to the wall, and mark position of all 4 holes with a pencil (1).
- 3 Using a masonry drill bit, drill all 4 holes into the wall (2).
- 4 Insert expansion plugs into the 4 holes (3).
- 5 Place key safe against the wall and screw into place with 4 screws (4).


1

Mark Holes

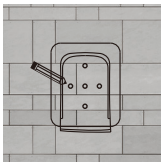


2

Drill Holes

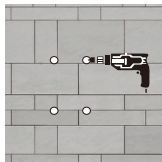

3

Insert Expansion  
Plugs

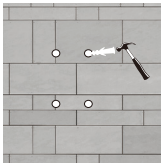


4

Screw Key Safe  
Into Place



## Opening the Key Safe

- 1 Slide down the Weather Resistant Cover to expose the Dials.
- 2 Rotate Dials, aligning numbers with Passcode Line (default 0-0-0-0).
- 3 Flip Switch 1 downward.

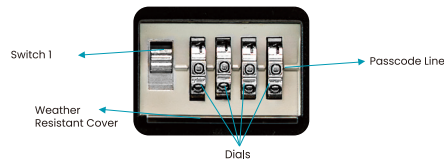

## Setting a Passcode

- 1 Open key safe with Dials set to current passcode (default 0-0-0-0).
- 2 Flip Code Lever to RESET (B) position.
- 3 Turn Dials to new combination (ensure code is aligned with Passcode Line).
- 4 Flip Code Lever to RESET (A) position. The new code is now set.

